

## ELENCO PRODOTTI UNITA' DRUM

### ETICHETTA



COD PRODOTTO – NOME PRODOTTO

*Cartuccia preferibile per l'ambiente:*

*Non conformità inferiori all'1%*

*Minimo 75% dei componenti riutilizzati*

*Non contiene sostanze pericolose e metalli pesanti dannosi per la salute e per l'ambiente*

*Componenti originari destinati a smaltimento < 5%*

*Involucro in plastica e confezione della cartuccia interamente riciclabili*

### ELENCO PRODOTTI

codice	descrizione
F010X123D	UNITA DRUM RIGENERATO for XEROX Series B
F010X5500D	UNITA DRUM RIGENERATO for XEROX Phaser B
F010X20D	UNITA DRUM RIGENERATO for XEROX M20i BK
F010X7500D	UNITA DRUM RIGENERATO for XEROX 7500i B
F010X5300D	UNITA DRUM RIGENERATO for XEROX 5300
F010X3330D	UNITA DRUM RIGENERATO for XEROX 3335 BK
F010X3330DVC	UNITA DRUM RIGENERATO for XEROX 3335 BK
F010X3260D	UNITA DRUM RIGENERATO for XEROX 3260 BK
F010X3260DVC	UNITA DRUM RIGENERATO for XEROX 3260 BK
F010TO140D	UNITA DRUM RIGENERATO for TOSHIBA 140F B
F010S5510D	UNITA DRUM RIGENERATO for SAUNG ML5515 B
F010S2625D	UNITA DRUM RIGENERATO for SAUNG M2625D B
F010S6555D	UNITA DRUM RIGENERATO for SAUNG 6555NX B
F010S4510D	UNITA DRUM RIGENERATO for SAUNG 4512ND B
F010S365D	UNITA DRUM RIGENERATO for SAUNG 360 C
F010S3825D	UNITA DRUM RIGENERATO for SAUNG 3325ND B
F010S310D	UNITA DRUM RIGENERATO for SAUNG 310 C
F010S320D	UNITA DRUM RIGENERATO for SAUNG 310 C
F010S6320D	UNITA DRUM RIGENERATO for SAMSUNGs B
F010S2625DVC	UNITA DRUM RIGENERATO for SAMSUNG M2625D BK
F010S8030DVC	UNITA DRUM RIGENERATO for SAMSUNG 8230NA BK
F010S4530D	UNITA DRUM RIGENERATO for SAMSUNG 4530NX BK
F010S4530DVC	UNITA DRUM RIGENERATO for SAMSUNG 4530NX BK
F010S4510DVC	UNITA DRUM RIGENERATO for SAMSUNG 4512ND BK
F010S365DVC	UNITA DRUM RIGENERATO for SAMSUNG 360 BCMY
F010S3825DVC	UNITA DRUM RIGENERATO for SAMSUNG 3325ND BK
F010S310DVC	UNITA DRUM RIGENERATO for SAMSUNG 310 BCMY
F010S320DVC	UNITA DRUM RIGENERATO for SAMSUNG 310 BCMY

F010S4580D	UNITA DRUM RIGENERATO for SAMSUNG 303 BK
F010S4580DVC	UNITA DRUM RIGENERATO for SAMSUNG 303 BK
F010SG736D	UNITA DRUM RIGENERATO for SAGEM MF3460 B
F010SG370D	UNITA DRUM RIGENERATO for SAGEM 5690 BK
F010SG756D	UNITA DRUM RIGENERATO for SAGEM 325 BK
F010R1200D	UNITA DRUM RIGENERATO for RICOH SP1200 B
F010RI1700D	UNITA DRUM RIGENERATO for RICOH 1750L BK
F010R1195D	UNITA DRUM RIGENERATO for RICOH 1195E BK
F010R1190D	UNITA DRUM RIGENERATO for RICOH 1190L BK
F010L935DC	UNITA DRUM RIGENERATO for PER LEXMARK C930 Series C-M-Y
F010L935DB	UNITA DRUM RIGENERATO for PER LEXMARK C930 Series BK
F010P2120DVC	UNITA DRUM RIGENERATO for PANASONIC MB2120 B
F010P412DVC	UNITA DRUM RIGENERATO for PANASONIC MB2010 B
F010P401DVC	UNITA DRUM RIGENERATO for PANASONIC FL401 BK
F010P511D	UNITA DRUM RIGENERATO for PANASONI 512 B
F010P401D	UNITA DRUM RIGENERATO for PANASONI 402 B
F010P412D	UNITA DRUM RIGENERATO for PANASON 2010 B
F010OK712DY	UNITA DRUM RIGENERATO for OKI ES7412 Y
F010OK712DM	UNITA DRUM RIGENERATO for OKI ES7412 M
F010OK712DC	UNITA DRUM RIGENERATO for OKI ES7412 C
F010OK712DB	UNITA DRUM RIGENERATO for OKI ES7412 BK
F010OK612DY	UNITA DRUM RIGENERATO for OKI ES6412 Y
F010OK612DM	UNITA DRUM RIGENERATO for OKI ES6412 M
F010OK612DC	UNITA DRUM RIGENERATO for OKI ES6412 C
F010OK612DB	UNITA DRUM RIGENERATO for OKI ES6412 BK
F010OK9600DY	UNITA DRUM RIGENERATO for OKI C9600HDN Y
F010OK9600DM	UNITA DRUM RIGENERATO for OKI C9600HDN M
F010OK9600DC	UNITA DRUM RIGENERATO for OKI C9600HDN C
F010OK9600DB	UNITA DRUM RIGENERATO for OKI C9600HDN B
F010OK9300DY	UNITA DRUM RIGENERATO for OKI C9200 Y
F010OK9300DM	UNITA DRUM RIGENERATO for OKI C9200 M
F010OK9300DC	UNITA DRUM RIGENERATO for OKI C9200 C
F010OK9300DB	UNITA DRUM RIGENERATO for OKI C9200 BK
F010OK8600DY	UNITA DRUM RIGENERATO for OKI C8600C Y
F010OK8600DM	UNITA DRUM RIGENERATO for OKI C8600C M
F010OK8600DC	UNITA DRUM RIGENERATO for OKI C8600C C
F010OK8600DB	UNITA DRUM RIGENERATO for OKI C8600C B
F010OK822DY	UNITA DRUM RIGENERATO for OKI C822dn Y
F010OK822DM	UNITA DRUM RIGENERATO for OKI C822dn M
F010OK822DC	UNITA DRUM RIGENERATO for OKI C822dn C
F010OK822DB	UNITA DRUM RIGENERATO for OKI C822dn BK
F010OK5750DY	UNITA DRUM RIGENERATO for OKI C5600 Y
F010OK5800DY	UNITA DRUM RIGENERATO for OKI C5600 Y
F010OK5850DY	UNITA DRUM RIGENERATO for OKI C5600 Y
F010OK610DY	UNITA DRUM RIGENERATO for OKI C5600 Y
F010OK6410DY	UNITA DRUM RIGENERATO for OKI C5600 Y

F0100K5750DM	UNITA DRUM RIGENERATO for OKI C5600 M
F0100K5800DM	UNITA DRUM RIGENERATO for OKI C5600 M
F0100K5850DM	UNITA DRUM RIGENERATO for OKI C5600 M
F0100K610DM	UNITA DRUM RIGENERATO for OKI C5600 M
F0100K6410DM	UNITA DRUM RIGENERATO for OKI C5600 M
F0100K5750DC	UNITA DRUM RIGENERATO for OKI C5600 C
F0100K5800DC	UNITA DRUM RIGENERATO for OKI C5600 C
F0100K5850DC	UNITA DRUM RIGENERATO for OKI C5600 C
F0100K610DC	UNITA DRUM RIGENERATO for OKI C5600 C
F0100K6410DC	UNITA DRUM RIGENERATO for OKI C5600 C
F0100K5750DB	UNITA DRUM RIGENERATO for OKI C5600 BK
F0100K5800DB	UNITA DRUM RIGENERATO for OKI C5600 BK
F0100K5850DB	UNITA DRUM RIGENERATO for OKI C5600 BK
F0100K610DB	UNITA DRUM RIGENERATO for OKI C5600 BK
F0100K6410DB	UNITA DRUM RIGENERATO for OKI C5600 BK
F0100K3400DY	UNITA DRUM RIGENERATO for OKI C3400 Y
F0100K3400DM	UNITA DRUM RIGENERATO for OKI C3400 M
F0100K3400DC	UNITA DRUM RIGENERATO for OKI C3400 C
F0100K3400DB	UNITA DRUM RIGENERATO for OKI C3400 BK
F0100K5100YD	UNITA DRUM RIGENERATO for OKI C3200N Y
F0100K5100MD	UNITA DRUM RIGENERATO for OKI C3200N M
F0100K5100CD	UNITA DRUM RIGENERATO for OKI C3200N C
F0100K5100BD	UNITA DRUM RIGENERATO for OKI C3200N BK
F0100K930D	UNITA DRUM RIGENERATO for OKI B930DTN BK
F0100K4400D	UNITA DRUM RIGENERATO for OKI B4550 BK
F0100K4400DVC	UNITA DRUM RIGENERATO for OKI B4550 BK
F0100K4520D	UNITA DRUM RIGENERATO for OKI B4525MFP B
F0100K410D	UNITA DRUM RIGENERATO for OKI B420D BK
F0100K410DVC	UNITA DRUM RIGENERATO for OKI B420D BK
F0100K4100D	UNITA DRUM RIGENERATO for OKI B4200 BK
F0100K401D	UNITA DRUM RIGENERATO for OKI B412 BK
F0100K401DVC	UNITA DRUM RIGENERATO for OKI B412 BK
F0100K411D	UNITA DRUM RIGENERATO for OKI B412 BK
F0100K411DVC	UNITA DRUM RIGENERATO for OKI B412 BK
F0100K851DY	UNITA DRUM RIGENERATO for OKI 851CDTN Y
F0100K851DM	UNITA DRUM RIGENERATO for OKI 851CDTN M
F0100K851DC	UNITA DRUM RIGENERATO for OKI 851CDTN C
F0100K851DB	UNITA DRUM RIGENERATO for OKI 851CDTN B
F0100K8460DY	UNITA DRUM RIGENERATO for OKI 8460CDTN Y
F0100K8460DM	UNITA DRUM RIGENERATO for OKI 8460CDTN M
F0100K8460DC	UNITA DRUM RIGENERATO for OKI 8460CDTN C
F0100K8460DB	UNITA DRUM RIGENERATO for OKI 8460CDTN B
F0100K9410DB	UNITA DRUM RIGENERATO for OKI 44035524 B
F0100K9410DC	UNITA DRUM RIGENERATO for OKI 44035523 C
F0100K9410DM	UNITA DRUM RIGENERATO for OKI 44035522 M
F0100K9410DY	UNITA DRUM RIGENERATO for OKI 44035521 Y

F010OK4131D	UNITA DRUM RIGENERATO for OKI 4161MFP BK
F010OK400800D	UNITA DRUM RIGENERATO for OKI 150 BK
F010OK14D	UNITA DRUM RIGENERATO for OKI 14EX BK
F010OK10D	UNITA DRUM RIGENERATO for OKI 10I BK
F010OK400ED	UNITA DRUM RIGENERATO for OKI 1000 BK
F010M4650DY	UNITA DRUM RIGENERATO for MINOLTAs Y
F010M4650DM	UNITA DRUM RIGENERATO for MINOLTAs M
F010M4650DC	UNITA DRUM RIGENERATO for MINOLTAs C
F010M4650DB	UNITA DRUM RIGENERATO for MINOLTAs B
F010M1300D	UNITA DRUM RIGENERATO for MINOLTA 1300 B
F010LX850D	UNITA DRUM RIGENERATO for LEXMARK X852 B
F010L850D	UNITA DRUM RIGENERATO for LEXMARK W850 B
F010D2330D	UNITA DRUM RIGENERATO for LEXMARK Optra E260, E260D
F010L810D	UNITA DRUM RIGENERATO for LEXMARK MS810dtn BK
F010L321DVC	UNITA DRUM RIGENERATO for LEXMARK MS321dn BK
F010L410DVC	UNITA DRUM RIGENERATO for LEXMARK MS310dn BK
F010LE260D	UNITA DRUM RIGENERATO for LEXMARK E260 B
F010L250DVC	UNITA DRUM RIGENERATO for LEXMARK E250DN BK
F010LE250D	UNITA DRUM RIGENERATO for LEXMARK E250 B
F010L230DVC	UNITA DRUM RIGENERATO for LEXMARK E232 BK
F010LE230D	UNITA DRUM RIGENERATO for LEXMARK E232 B
F010LE120D	UNITA DRUM RIGENERATO for LEXMARK E120 B
F010L410D	UNITA DRUM RIGENERATO for LEXMARK 410d B
F010L321D	UNITA DRUM RIGENERATO for LEXMARK 321 B
F010IBOKD	UNITA DRUM RIGENERATO for LEMARK Tally B
F010L840D	UNITA DRUM RIGENERATO for LEARK W840 B
F012KY150DVC	UNITA DRUM RIGENERATO for KYOCERA FS1300 BK
F012KY1110DVC	UNITA DRUM RIGENERATO for KYOCERA FS1061N BK
F010H430DVC	UNITA DRUM RIGENERATO for HP MFP BK
F010H203D	UNITA DRUM RIGENERATO for HP M203d BK
F010H203DVC	UNITA DRUM RIGENERATO for HP M203d BK
F010H102D	UNITA DRUM RIGENERATO for HP M102A BK
F010H102DVC	UNITA DRUM RIGENERATO for HP M102A BK
F010H6015DY	UNITA DRUM RIGENERATO for HP CP6015DE Y
F010H6015DM	UNITA DRUM RIGENERATO for HP CP6015DE M
F010H6015DC	UNITA DRUM RIGENERATO for HP CP6015DE C
F010H6015DB	UNITA DRUM RIGENERATO for HP CP6015DE BK
F010H1025D	UNITA DRUM RIGENERATO for HP C1000 BCMY
F010H1025DVC	UNITA DRUM RIGENERATO for HP C1000 BCMY
F010HP2500D	UNITA DRUM RIGENERATO for HP 1500 BCMY
F010EP5700D	UNITA DRUM RIGENERATO for EPSON5700 B
F010EP900D	UNITA DRUM RIGENERATO for EPSON C900N C
F010E3900DY	UNITA DRUM RIGENERATO for EPSON C3900TN Y
F010E3900DM	UNITA DRUM RIGENERATO for EPSON C3900TN M
F010E3900DC	UNITA DRUM RIGENERATO for EPSON C3900TN C
F010E3900DB	UNITA DRUM RIGENERATO for EPSON C3900TN BK

F010EP1000D	UNITA DRUM RIGENERATO for EPSON C1000N B
F010E6200DVC	UNITA DRUM RIGENERATO for EPSON 6200L BK
F010EP6200D	UNITA DRUM RIGENERATO for EPSON 6200L BK
F010EP5500D	UNITA DRUM RIGENERATO for EPSON 5500W B
F012C2535D	UNITA DRUM RIGENERATO for CANON IR2530 BK
F012C2230D	UNITA DRUM RIGENERATO for CANON IR2230 B
F012C2200D	UNITA DRUM RIGENERATO for CANON IR2200 BK
F012C2016D	UNITA DRUM RIGENERATO for CANON IR2016 BK
F012C1600D	UNITA DRUM RIGENERATO for CANON IR1600 BK
F010OK301D	UNITA DRUM RIGENERATO for C511 MC362 C
F010B8260DVC	UNITA DRUM RIGENERATO for BROTHER L8260C BK
F010B3400DVC	UNITA DRUM RIGENERATO for BROTHER L5100DN BK
F010B2400DVC	UNITA DRUM RIGENERATO for BROTHER L2350DN BK
F010B2300DVC	UNITA DRUM RIGENERATO for BROTHER L2340DW BK
F010B3040DC	UNITA DRUM RIGENERATO for BROTHER HL CMY
F010BR8000D	UNITA DRUM RIGENERATO for BROTHER Fax BK
F010B8260D	UNITA DRUM RIGENERATO for BROTHER 8260 B
F010B8250D	UNITA DRUM RIGENERATO for BROTHER 8250 C
F010BR200D	UNITA DRUM RIGENERATO for BROTHER 730 BK
F010B5500D	UNITA DRUM RIGENERATO for BROTHER 7050 B
F010BR4100D	UNITA DRUM RIGENERATO for BROTHER 6050 B
F010B3300DVC	UNITA DRUM RIGENERATO for BROTHER 5450DN BK
F010B3300D	UNITA DRUM RIGENERATO for BROTHER 5450 B
F010B3100DVC	UNITA DRUM RIGENERATO for BROTHER 5240L BK
F010B3100DVCU	UNITA DRUM RIGENERATO for BROTHER 5240L BK
F010B3200DVC	UNITA DRUM RIGENERATO for BROTHER 5240L BK
F010BR3100D	UNITA DRUM RIGENERATO for BROTHER 5240 B
F010BR3200D	UNITA DRUM RIGENERATO for BROTHER 5240 B
F010B3400D	UNITA DRUM RIGENERATO for BROTHER 5100 B
F010B4140D	UNITA DRUM RIGENERATO for BROTHER 4140 C
F010B4000D	UNITA DRUM RIGENERATO for BROTHER 4040 B
F010BDR243CLVC	UNITA DRUM RIGENERATO for BROTHER 3200 BCMY
F010B3140DC	UNITA DRUM RIGENERATO for BROTHER 3150 C
F010B3140DVCB	UNITA DRUM RIGENERATO for BROTHER 3142CDW BK
F010B3140DB	UNITA DRUM RIGENERATO for BROTHER 3142 B
F010B3140DVCC	UNITA DRUM RIGENERATO for BROTHER 3140C CMY
F010B3140DK	UNITA DRUM RIGENERATO for BROTHER 3140 C
F010B3140DVCK	UNITA DRUM RIGENERATO for BROTHER 3140 BCMY
F010B3040D	UNITA DRUM RIGENERATO for BROTHER 3070 B
F010B2300D	UNITA DRUM RIGENERATO for BROTHER 2340 B
F010B2100DVC	UNITA DRUM RIGENERATO for BROTHER 2150 BK
F010BR2100D	UNITA DRUM RIGENERATO for BROTHER 2150 B
F010B2200DVC	UNITA DRUM RIGENERATO for BROTHER 2135 BK
F010B2200D	UNITA DRUM RIGENERATO for BROTHER 2135 B
F010B2000DVCU	UNITA DRUM RIGENERATO for BROTHER 2035 BK
F010B2005DVC	UNITA DRUM RIGENERATO for BROTHER 2035 BK

F010B2005D	UNITA DRUM RIGENERATO for BROTHER 2035 B
F010BR2000D	UNITA DRUM RIGENERATO for BROTHER 2035 B
F010B3000DVC	UNITA DRUM RIGENERATO for BROTHER 1230 BK
F010B6600DVC	UNITA DRUM RIGENERATO for BROTHER 1230 BK
F010B7600DVC	UNITA DRUM RIGENERATO for BROTHER 1230 BK
F010BR3000D	UNITA DRUM RIGENERATO for BROTHER 1230 B
F010BR6600D	UNITA DRUM RIGENERATO for BROTHER 1230 B
F010BR7600D	UNITA DRUM RIGENERATO for BROTHER 1230 B
F010B1110DVC	UNITA DRUM RIGENERATO for BROTHER 1110R BK
F010B1110D	UNITA DRUM RIGENERATO for BROTHER 1110 B
F010BR300D	UNITA DRUM RIGENERATO for BROTHER 1040 B
F010EP1100D	UNITA DRUM RIGENERATO for EPSON ACULASER C1100