

ELENCO PRODOTTI UNITÀ DRUM

ETICHETTA 0017



Etichetta ambientale certificata

Non conformità inferiori all'1%

Minimo 75% dei componenti riutilizzati

Non contiene sostanze pericolose e metalli pesanti dannosi per la salute e per l'ambiente

Componenti originari destinati a smaltimento < 5%

Involucro/confezione della cartuccia interamente riciclabile

ELENCO PRODOTTI

CODICE	DESCRIZIONE
F010B1110D	UNITA DRUM RIGENERATO for BROTHER 1110 B
F010B2000DU	UNITA DRUM RIGENERATO for BROTHER 2035 BK
F010B2005D	UNITA DRUM RIGENERATO for BROTHER 2035 B
F010B2100D	UNITA DRUM RIGENERATO for BROTHER 2150 BK
F010B2200D	UNITA DRUM RIGENERATO for BROTHER 2135 B
F010B2300D	UNITA DRUM RIGENERATO for BROTHER 2340 B
F010B2400D	UNITA DRUM RIGENERATO for BROTHER L2350DN BK
F010B3000D	UNITA DRUM RIGENERATO for BROTHER 1230 BK
F010B3040D	UNITA DRUM RIGENERATO for BROTHER 3070 B
F010B3040DC	UNITA DRUM RIGENERATO for BROTHER HL CMY
F010B3100D	UNITA DRUM RIGENERATO for BROTHER 5240L BK
F010B3100DU	UNITA DRUM RIGENERATO for BROTHER 5240L BK
F010B3140DB	UNITA DRUM RIGENERATO for BROTHER 3142 B
F010B3140DC	UNITA DRUM RIGENERATO for BROTHER 3150 C
F010B3140D	UNITA DRUM RIGENERATO for BROTHER 3140C CMY
F010B3200D	UNITA DRUM RIGENERATO for BROTHER 5240L BK
F010B3300D	UNITA DRUM RIGENERATO for BROTHER 5450 B
F010B3400D	UNITA DRUM RIGENERATO for BROTHER 5100 B
F010B4000D	UNITA DRUM RIGENERATO for BROTHER 4040 B
F010B4140D	UNITA DRUM RIGENERATO for BROTHER 4140 C
F010B5500D	UNITA DRUM RIGENERATO for BROTHER 7050 B
F010B6600D	UNITA DRUM RIGENERATO for BROTHER 1230 BK
F010B7600D	UNITA DRUM RIGENERATO for BROTHER 1230 BK
F010B8250D	UNITA DRUM RIGENERATO for BROTHER 8250 C
F010B8260D	UNITA DRUM RIGENERATO for BROTHER 8260 C
F010BDR243CL	UNITA DRUM RIGENERATO for BROTHER 3200 BCMY
F010BR2000D	UNITA DRUM RIGENERATO for BROTHER 2035 B
F010BR200D	UNITA DRUM RIGENERATO for BROTHER 730 BK
F010BR2100D	UNITA DRUM RIGENERATO for BROTHER 2150 B
F010BR3000D	UNITA DRUM RIGENERATO for BROTHER 1230 B
F010BR300D	UNITA DRUM RIGENERATO for BROTHER 1040 B
F010BR3100D	UNITA DRUM RIGENERATO for BROTHER 5240 B
F010BR3200D	UNITA DRUM RIGENERATO for BROTHER 5240 B
F010BR4100D	UNITA DRUM RIGENERATO for BROTHER 6050 B
F010BR6600D	UNITA DRUM RIGENERATO for BROTHER 1230 B
F010BR7600D	UNITA DRUM RIGENERATO for BROTHER 1230 B
F010BR8000D	UNITA DRUM RIGENERATO for BROTHER Fax BK
F010E320D	UNITA DRUM RIGENERATO for EPSON AL-M220

F010E3900DB	UNITA DRUM RIGENERATO for EPSON C3900TN BK
F010E3900DC	UNITA DRUM RIGENERATO for EPSON C3900TN C
F010E3900DM	UNITA DRUM RIGENERATO for EPSON C3900TN M
F010E3900DY	UNITA DRUM RIGENERATO for EPSON C3900TN Y
F010E6200D	UNITA DRUM RIGENERATO for EPSON 6200L BK
F010EP1000D	UNITA DRUM RIGENERATO for EPSON C1000 BK
F010EP5500D	UNITA DRUM RIGENERATO for EPSON 5500W BK
F010EP5700D	UNITA DRUM RIGENERATO for EPSON5700 BK
F010EP6200D	UNITA DRUM RIGENERATO for EPSON 6200L BK
F010EP900D	UNITA DRUM RIGENERATO for EPSON C900N C
F010H1025D	UNITA DRUM RIGENERATO for HP C1000 BKCMY
F010H102D	UNITA DRUM RIGENERATO for HP M102A BK
F010H203D	UNITA DRUM RIGENERATO for HP M203d BK
F010H430D	UNITA DRUM RIGENERATO for HP MFP M430 BK
F010H6015DB	UNITA DRUM RIGENERATO for HP CP6015DE BK
F010H6015DC	UNITA DRUM RIGENERATO for HP CP6015DE C
F010H6015DM	UNITA DRUM RIGENERATO for HP CP6015DE M
F010H6015DY	UNITA DRUM RIGENERATO for HP CP6015DE Y
F010HP2500D	UNITA DRUM RIGENERATO for HP 1500 BKCMY
F010IBOKD	UNITA DRUM RIGENERATO for LEXMARK K1220
F010L230D	UNITA DRUM RIGENERATO for LEXMARK E232 BK
F010L250D	UNITA DRUM RIGENERATO for LEXMARK E250DN BK
F010L260D	UNITA DRUM RIGENERATO for LEXMARK E260 BK
F010L321D	UNITA DRUM RIGENERATO for LEXMARK 321 BK
F010L410D	UNITA DRUM RIGENERATO for LEXMARK 310 BK
F010L5155D	UNITA DRUM RIGENERATO for LEXMARK M5155 BK
F010L810D	UNITA DRUM RIGENERATO for LEXMARK MS810dtn BK
F010L840D	UNITA DRUM RIGENERATO for LEARK W840 BK
F010L850D	UNITA DRUM RIGENERATO for LEXMARK W850 BK
F010L935DC	UNITA DRUM RIGENERATO for LEXMARK C930 Series C-M-Y
F010LE120D	UNITA DRUM RIGENERATO for LEXMARK E120 B
F010LE230D	UNITA DRUM RIGENERATO for LEXMARK E232 B
F010LE250D	UNITA DRUM RIGENERATO for LEXMARK E250 B
F010LE260D	UNITA DRUM RIGENERATO for LEXMARK E260 B
F010LX850D	UNITA DRUM RIGENERATO for LEXMARK X852 B
F010M1300D	UNITA DRUM RIGENERATO for MINOLTA 1300 B
F010M4650DB	UNITA DRUM RIGENERATO for MINOLTA 4600 B
F010M4650DC	UNITA DRUM RIGENERATO for MINOLTA 4600 C
F010M4650DM	UNITA DRUM RIGENERATO for MINOLTA 4600 M
F010M4650DY	UNITA DRUM RIGENERATO for MINOLTA 4600 Y
F010OK10D	UNITA DRUM RIGENERATO for OKI 10I BK
F010OK14D	UNITA DRUM RIGENERATO for OKI 14EX BK
F010OK301D	UNITA DRUM RIGENERATO for OKI C511 MC362
F010OK3400DB	UNITA DRUM RIGENERATO for OKI C3400 BK
F010OK3400DC	UNITA DRUM RIGENERATO for OKI C3400 C
F010OK3400DM	UNITA DRUM RIGENERATO for OKI C3400 M
F010OK3400DY	UNITA DRUM RIGENERATO for OKI C3400 Y
F010OK400800D	UNITA DRUM RIGENERATO for OKI 150 BK
F010OK400ED	UNITA DRUM RIGENERATO for OKI 1000 BK
F010OK401D	UNITA DRUM RIGENERATO for OKI B412 BK
F010OK4100D	UNITA DRUM RIGENERATO for OKI B4200 BK
F010OK410D	UNITA DRUM RIGENERATO for OKI B420D BK
F010OK411D	UNITA DRUM RIGENERATO for OKI B412 BK
F010OK4131D	UNITA DRUM RIGENERATO for OKI 4161MFP BK

F0100K4400D	UNITA DRUM RIGENERATO for OKI B4550 BK
F0100K4520D	UNITA DRUM RIGENERATO for OKI B4525 BK
F0100K5100BD	UNITA DRUM RIGENERATO for OKI C3200N BK
F0100K5100CD	UNITA DRUM RIGENERATO for OKI C3200N C
F0100K5100MD	UNITA DRUM RIGENERATO for OKI C3200N M
F0100K5100YD	UNITA DRUM RIGENERATO for OKI C3200N Y
F0100K5750DB	UNITA DRUM RIGENERATO for OKI C 5650 BK
F0100K5750DC	UNITA DRUM RIGENERATO for OKI C 5650 C
F0100K5750DM	UNITA DRUM RIGENERATO for OKI C 5650 M
F0100K5750DY	UNITA DRUM RIGENERATO for OKI C 5650 Y
F0100K5800DB	UNITA DRUM RIGENERATO for OKI C5500N BK
F0100K5800DC	UNITA DRUM RIGENERATO for OKI C5500N C
F0100K5800DM	UNITA DRUM RIGENERATO for OKI C5500N M
F0100K5800DY	UNITA DRUM RIGENERATO for OKI C5500N Y
F0100K5850DB	UNITA DRUM RIGENERATO for OKI C5850 BK
F0100K5850DC	UNITA DRUM RIGENERATO for OKI C5850 C
F0100K5850DM	UNITA DRUM RIGENERATO for OKI C5850 M
F0100K5850DY	UNITA DRUM RIGENERATO for OKI C5850 Y
F0100K610DB	UNITA DRUM RIGENERATO for OKI C610 BK
F0100K610DC	UNITA DRUM RIGENERATO for OKI C610 C
F0100K610DM	UNITA DRUM RIGENERATO for OKI C610 M
F0100K610DY	UNITA DRUM RIGENERATO for OKI C610 Y
F0100K612DB	UNITA DRUM RIGENERATO for OKI ES6412 BK
F0100K612DC	UNITA DRUM RIGENERATO for OKI ES6412 C
F0100K612DM	UNITA DRUM RIGENERATO for OKI ES6412 M
F0100K612DY	UNITA DRUM RIGENERATO for OKI ES6412 Y
F0100K6410DB	UNITA DRUM RIGENERATO for OKI ES6410 BK
F0100K6410DC	UNITA DRUM RIGENERATO for OKI ES6410 C
F0100K6410DM	UNITA DRUM RIGENERATO for OKI ES6410 M
F0100K6410DY	UNITA DRUM RIGENERATO for OKI ES6410 Y
F0100K712DB	UNITA DRUM RIGENERATO for OKI ES7412 BK
F0100K712DC	UNITA DRUM RIGENERATO for OKI ES7412 C
F0100K712DM	UNITA DRUM RIGENERATO for OKI ES7412 M
F0100K712DY	UNITA DRUM RIGENERATO for OKI ES7412 Y
F0100K822DB	UNITA DRUM RIGENERATO for OKI C822dn BK
F0100K822DC	UNITA DRUM RIGENERATO for OKI C822dn C
F0100K822DM	UNITA DRUM RIGENERATO for OKI C822dn M
F0100K822DY	UNITA DRUM RIGENERATO for OKI C822dn Y
F0100K8460DB	UNITA DRUM RIGENERATO for OKI ES8460 BK
F0100K8460DC	UNITA DRUM RIGENERATO for OKI 8460CDTN C
F0100K8460DM	UNITA DRUM RIGENERATO for OKI 8460CDTN M
F0100K8460DY	UNITA DRUM RIGENERATO for OKI 8460CDTN Y
F0100K851DB	UNITA DRUM RIGENERATO for OKI 851CDTN BK
F0100K851DC	UNITA DRUM RIGENERATO for OKI 851CDTN C
F0100K851DM	UNITA DRUM RIGENERATO for OKI 851CDTN M
F0100K851DY	UNITA DRUM RIGENERATO for OKI 851CDTN Y
F0100K853DB	UNITA DRUM RIGENERATO for OKI MC853 BK
F0100K853DC	UNITA DRUM RIGENERATO for OKI MC853 C
F0100K853DM	UNITA DRUM RIGENERATO for OKI MC853 M
F0100K853DY	UNITA DRUM RIGENERATO for OKI MC853 Y
F0100K8600DB	UNITA DRUM RIGENERATO for OKI C8600C BK
F0100K8600DC	UNITA DRUM RIGENERATO for OKI C8600C C
F0100K8600DM	UNITA DRUM RIGENERATO for OKI C8600C M
F0100K8600DY	UNITA DRUM RIGENERATO for OKI C8600C Y

F010OK9300DB	UNITA DRUM RIGENERATO for OKI C9200 BK
F010OK9300DC	UNITA DRUM RIGENERATO for OKI C9200 C
F010OK9300DM	UNITA DRUM RIGENERATO for OKI C9200 M
F010OK9300DY	UNITA DRUM RIGENERATO for OKI C9200 Y
F010OK930D	UNITA DRUM RIGENERATO for OKI B930DTN BK
F010OK9410DB	UNITA DRUM RIGENERATO for OKI 44035524 B
F010OK9410DC	UNITA DRUM RIGENERATO for OKI 44035523 C
F010OK9410DM	UNITA DRUM RIGENERATO for OKI 44035522 M
F010OK9410DY	UNITA DRUM RIGENERATO for OKI 44035521 Y
F010OK9600DB	UNITA DRUM RIGENERATO for OKI C9600 BK
F010OK9600DC	UNITA DRUM RIGENERATO for OKI C9600HDN C
F010OK9600DM	UNITA DRUM RIGENERATO for OKI C9600HDN M
F010OK9600DY	UNITA DRUM RIGENERATO for OKI C9600HDN Y
F010P2120D	UNITA DRUM RIGENERATO for PANASONIC MB2120 B
F010P401D	UNITA DRUM RIGENERATO for PANASONI 402 B
F010P412D	UNITA DRUM RIGENERATO for PANASONIC MB2010 B
F010P511D	UNITA DRUM RIGENERATO for PANASONI 512 BK
F010PKXFAD93X	UNITA DRUM RIGENERATO for PANASONIC FAD93X B
F010R1190D	UNITA DRUM RIGENERATO for RICOH 1190L BK
F010R1195D	UNITA DRUM RIGENERATO for RICOH 1195E BK
F010R1200D	UNITA DRUM RIGENERATO for RICOH SP1200 B
F010R230D	UNITA DRUM RIGENERATO for RICOH SP230 BK
F010RI1700D	UNITA DRUM RIGENERATO for RICOH 1750L BK
F010S2625D	UNITA DRUM RIGENERATO for SAUNG M2625 BK
F010S310D	UNITA DRUM RIGENERATO for SAUNG 310 C
F010S320D	UNITA DRUM RIGENERATO for SAMSUNG 310 C
F010S365D	UNITA DRUM RIGENERATO for SAUNG 360 C
F010S3825D	UNITA DRUM RIGENERATO for SAUNG ML3325 B
F010S4510D	UNITA DRUM RIGENERATO for SAUNG ML4512 B
F010S4530D	UNITA DRUM RIGENERATO for SAMSUNG 4530NX
F010S4580D	UNITA DRUM RIGENERATO for SAMSUNG 303 BK
F010S5510D	UNITA DRUM RIGENERATO for SAUNG ML5515 B
F010S6320D	UNITA DRUM RIGENERATO for SAMSUNG 6320 B
F010S6555D	UNITA DRUM RIGENERATO for SAUNG 6555 BK
F010S8030D	UNITA DRUM RIGENERATO for SAMSUNG 8230NA BK
F010SG370D	UNITA DRUM RIGENERATO for SAGEM 5690 BK
F010SG736D	UNITA DRUM RIGENERATO for SAGEM MF3460 B
F010SG756D	UNITA DRUM RIGENERATO for SAGEM 325 BK
F010TO140D	UNITA DRUM RIGENERATO for TOSHIBA 140 BK
F010X123D	UNITA DRUM RIGENERATO for XEROX C120 BK
F010X205D	UNITA DRUM RIGENERATO for XEROX B205 B210 BK
F010X20D	UNITA DRUM RIGENERATO for XEROX M20i BK
F010X3260D	UNITA DRUM RIGENERATO for XEROX 3260 BK
F010X3330D	UNITA DRUM RIGENERATO for XEROX 3335 BK
F010X5225D	UNITA DRUM RIGENERATO for XEROX 5225 BK
F010X5300D	UNITA DRUM RIGENERATO for XEROX 5300
F010X5500D	UNITA DRUM RIGENERATO for XEROX 5500 BK
F010X6600DK	UNITA DRUM RIGENERATO for XEROX 6600 C
F010X7025D	UNITA DRUM RIGENERATO for XEROX B7000 BK
F010X7500D	UNITA DRUM RIGENERATO for XEROX 7500i BK
F012C1600D	UNITA DRUM RIGENERATO for CANON Image Runner
F012C2016D	UNITA DRUM RIGENERATO for CANON IR2016 BK
F012C2200D	UNITA DRUM RIGENERATO for CANON image Runner
F012C2230D	UNITA DRUM RIGENERATO for CANON IR2230 BK

F012C2535D	UNITA DRUM RIGENERATO for CANON IR2530 BK
F012KY1110D	UNITA DRUM RIGENERATO for KYOCERA FS1061N BK
F012KY150D	UNITA DRUM RIGENERATO for KYOCERA FS1300 BK
F012M220DB	UNITA DRUM RIGENERATO for MINOLTA C220 B
F012M220DC	UNITA DRUM RIGENERATO for MINOLTA C220 C
F010CAN051D	UNITA DRUM RIGENERATO for CANON LBP-162 BK
F010CANCEXV52D	UNITA DRUM RIGENERATO for CANON 4525i BK
F010CEXV18D	UNITA DRUM RIGENERATO for CANON IR1018J BK
F010CEXV23D	UNITA DRUM RIGENERATO for CANON IR2018i BK
F010CEXV47D_M	UNITA DRUM RIGENERATO for CANON C250 M
F010CEXV52D	UNITA DRUM RIGENERATO for CANON 4525i BK
F010CEXV7D	UNITA DRUM RIGENERATO for CANON IR1210 BK
F010CLBP162D	UNITA DRUM RIGENERATO for CANON LBP-162 BK
F010CLBP850D_BCMY	UNITA DRUM RIGENERATO for CANON LBP-850
F010EM300D	UNITA DRUM RIGENERATO for EPSON ALM300BK
F010EM300F	UNITA DRUM RIGENERATO for EPSON M300DTN
F010EM400D	UNITA DRUM RIGENERATO for EPSON M400 BK
F010EM400F	UNITA DRUM RIGENERATO for EPSON M400DTN
F010H150A	UNITA DRUM RIGENERATO for HP 150a 170 BK
F010HPCF358A_B	UNITA DRUM RIGENERATO for HP M880 BK
F010HPCF359A_C	UNITA DRUM RIGENERATO for HP M880 C
F010HPCF364A_Y	UNITA DRUM RIGENERATO for HP M880 Y
F010HPCF365A_M	UNITA DRUM RIGENERATO for HP M880 M
F010HM751_CMY	UNITA DRUM RIGENERATO for HP M751 CMY
F010HUX15000D	UNITA DRUM RIGENERATO for HUAWEI PixLab B5 B
F010HW1332AD	UNITA DRUM RIGENERATO for HP Laser 408DN
F010L317D	UNITA DRUM RIGENERATO for LEXMARK CS 317
F010L734D	UNITA DRUM RIGENERATO for LEXMARK C734 BK
F010LB3340	UNITA DRUM RIGENERATO for LEXMARK B3340 BK
F010LC2132D_BCMY	UNITA DRUM RIGENERATO for LEXMARK C2132 BCMY
F010LC9235	UNITA DRUM RIGENERATO for LEXMARK C9235
F010LCS921_CMY	UNITA DRUM RIGENERATO for LEXMARK CS921
F010LM1140	UNITA DRUM RIGENERATO for LEXMARK M1140 BK
F010OK7100D_B	UNITA DRUM RIGENERATO for OKI C7000, C7100 B
F010OK7100D_C	UNITA DRUM RIGENERATO for OKI C7000, C7100 C
F010OK7100D_M	UNITA DRUM RIGENERATO for OKI C7000, C7100 M
F010OK7100D_Y	UNITA DRUM RIGENERATO for OKI C7000, C7100 Y
F010P781D	UNITA DRUM RIGENERATO for PANASONIC MB781 BK
F010PANTDL410D	UNITA DRUM RIGENERATO for PANTUM P 2500 BK
F010PANTDL425D	UNITA DRUM RIGENERATO for PANTUM P 3305 BK
F010PANTDL5120D	UNITA DRUM RIGENERATO for PANTUM BP 5100 BK
F010PANTDL5126D	UNITA DRUM RIGENERATO for PANTUM P 3305 BK
F010PKX-FA78X	UNITA DRUM RIGENERATO for PANASONIC FL 501 BK
F010RSPC430DB	UNITA DRUM RIGENERATO for RICOH SP C 430
F010RSPC430D_CMY	UNITA DRUM RIGENERATO for RICOH SP C 430
F010S3250D	UNITA DRUM RIGENERATO for SAUNG K3250 BK
F010S4370D	UNITA DRUM RIGENERATO for SAMSUNG M4370 BK
F010SCX8123D	UNITA DRUM RIGENERATO for SAMSUN SCX8123
F010SK7400D	UNITA DRUM RIGENERATO for SAMSUNG K7400
F010X3610D	UNITA DRUM RIGENERATO for XEROX 3610 BK
F010X4600D	UNITA DRUM RIGENERATO for XEROX 4600 BK
F010X6510D_B	UNITA' DRUM RIGENERATO for XEROX 6510DN
F010X6510D_C	UNITA' DRUM RIGENERATO for XEROX 6510DN
F010X6510D_M	UNITA' DRUM RIGENERATO for XEROX 6510DN

F010X6510D_Y	UNITA' DRUM RIGENERATO for XEROX 6510DN
F010X7100D_B	UNITA DRUM RIGENERATO for XEROX 7100dn
F010X7100D_CMY	UNITA DRUM RIGENERATO for XEROX 7100dn
F010X7220iD_B	UNITA DRUM RIGENERATO for XEROX 7220i BK
F010X7220iD_C	UNITA DRUM RIGENERATO for XEROX 7220i C
F010X7220iD_M	UNITA DRUM RIGENERATO for XEROX 7220i M
F010X7220iD_Y	UNITA DRUM RIGENERATO for XEROX 7220i Y
F010X7425D	UNITA DRUM RIGENERATO for XEROX WC 7425
F010X7760D_BCMY	UNITA DRUM RIGENERATO for XEROX 7760DN
F010X7765D_B	UNITA DRUM RIGENERATO for XEROX 7655 BK
F010X7765D_C	UNITA DRUM RIGENERATO for XEROX 7655 C
F010X7765D_CMY	UNITA DRUM RIGENERATO for XEROX 7655 CMY
F010X7765D_M	UNITA DRUM RIGENERATO for XEROX 7655 M
F010X7765D_Y	UNITA DRUM RIGENERATO for XEROX 7655 Y
F010X7800D_BCMY	UNITA DRUM RIGENERATO for XEROX 7800
F010X7835D	UNITA DRUM RIGENERATO for XEROX 7835 BK
F010XB1022D	UNITA DRUM RIGENERATO for XEROX B1022 BK
F010XC400D_C	UNITA DRUM RIGENERATO for XEROX C400 C
F010XC400D_M	UNITA DRUM RIGENERATO for XEROX C400 M
F010XC400D_Y	UNITA DRUM RIGENERATO for XEROX C400 Y
F010XC500D_B	UNITA DRUM RIGENERATO for XEROX C500 BK
F010XC500D_C	UNITA DRUM RIGENERATO for XEROX C500 C
F010XC500D_M	UNITA DRUM RIGENERATO for XEROX C500 M
F010XC500D_Y	UNITA DRUM RIGENERATO for XEROX C500 Y
F010XC560D_B	UNITA DRUM RIGENERATO for XEROX C550 BK
F010XC560D_CMY	UNITA DRUM RIGENERATO for XEROX C550 CMY
F010XC7000D	UNITA DRUM RIGENERATO for XEROX C7000DN
F010XC7120D_BCMY	UNITA DRUM RIGENERATO for XEROX C7120
F010XC8000D_BCMY	UNITA DRUM RIGENERATO for XEROX C8000
F010XC8130D_CMY	UNITA DRUM RIGENERATO for XEROX C8130
F012C2630D	UNITA DRUM RIGENERATO for CANON IR2630 BK
F012C3330D	UNITA DRUM RIGENERATO for CANON IRC3500II BK
F012C471059D_B	UNITA DRUM RIGENERATO for CANON C-EXV59 BK
F012C4959ND_B	UNITA DRUM RIGENERATO for CANON C-EXV14 BK
F012C5228D_BCMY	UNITA DRUM RIGENERATO for CANON CEXV49 BCMY
F012C5659D_B	UNITA DRUM RIGENERATO for CANON C-EXV37 BK
F012C5670D_BCMY	UNITA DRUM RIGENERATO for CANON CEXV28 BCMY
F012C5674D_B	UNITA DRUM RIGENERATO for CANON C-EXV50 BK
F012C5675D_BCMY	UNITA DRUM RIGENERATO for CANON CEXV51 BCMY
F012C5818UD_B	UNITA DRUM RIGENERATO for CANON C-EXV18 BK
F012C5820ND_B	UNITA DRUM RIGENERATO for CANON C-EXV23 BK
F012C5821UD_B	UNITA DRUM RIGENERATO for CANON C-EXV11 BK
F012C7490D_B	UNITA DRUM RIGENERATO for CANON C-EXV53 BK
F012CANCEXV42DR	UNITA DRUM RIGENERATO for CANON IR 2202
F012CEXV42D	UNITA DRUM RIGENERATO for CANON IR 2202
F012CEXV47D_B	UNITA DRUM RIGENERATO for CANON C250 BK
F012CEXV47D_C	UNITA DRUM RIGENERATO for CANON C250 C
F012CEXV47D_Y	UNITA DRUM RIGENERATO for CANON C250 Y
F012KY1248D	UNITA DRUM RIGENERATO for KYOCERA PA2001 BK
F012KY3130D	UNITA DRUM RIGENERATO for KYOCERA M3550
F012KY3170D	UNITA DRUM RIGENERATO for KYOCERA M3145
F012KY3190D	UNITA DRUM RIGENERATO for KYOCERA P3050
F012KY471064D	UNITA DRUM RIGENERATO for KYOCERA DK-150 BK
F012KY5230D_B	UNITA DRUM RIGENERATO for KYOCERA M5521G BK

F012KY5231D_CMY	UNITA DRUM RIGENERATO for KYOCERA DK5231 CMY
F012KYCE8997D	UNITA DRUM RIGENERATO for KYOCERA DK1150 BK
F012KYDK1150D	UNITA DRUM RIGENERATO for KYOCERA Ecosys 2135
F012KYMK460D	UNITA DRUM RIGENERATO for KYOCERA 180 181 BK
F012M1060D_GRAY	UNITA DRUM RIGENERATO for MINOLTA C1060 GRAY
F012M222K	UNITA DRUM RIGENERATO for MINOLTA 222 BK
F012M223K	UNITA DRUM RIGENERATO for MINOLTA 223 BK
F012M224_B	UNITA DRUM RIGENERATO for for MINOLTA C224 BK
F012M224_CMY	UNITA DRUM RIGENERATO for MINOLTA C224 CMY
F012M312D_BCMY	UNITA DRUM RIGENERATO for MINOLTA 227 BCMY
F012M316D_CMY	UNITA DRUM RIGENERATO for MINOLTA DR316 CMY
F012M471045D_B	UNITA DRUM RIGENERATO for MINOLTA DR316K BK
F012M471060D_B	UNITA DRUM RIGENERATO for MINOLTA DR618K BK
F012M471075D_B	UNITA DRUM RIGENERATO for MINOLTA DR218 BK
F012M618D_CMY	UNITA DRUM RIGENERATO for MINOLTA DR618 CMY
F012M7368UD_B	UNITA DRUM RIGENERATO for MINOLTA DR512K BK
F012M7369UD_CMY	UNITA DRUM RIGENERATO for MINOLTA DR512 CMY
F012M7370HD_CMY	UNITA DRUM RIGENERATO for MINOLTA DR313K CMY
F012M7371HD_CMY	UNITA DRUM RIGENERATO for MINOLTA DR313 CMY
F012M7372D_B	UNITA DRUM RIGENERATO for MINOLTA DR312 BK
F012M7373UD_B	UNITA DRUM RIGENERATO for MINOLTA DR214K BK
F012M7983UD_B	UNITA DRUM RIGENERATO for MINOLTA DR311K BK
F012M7984UD_CMY	UNITA DRUM RIGENERATO for MINOLTA DR311 CMY
F012MBIZ164D_CMY	UNITA DRUM RIGENERATO for MINOLTA 164
F012MC250iD_B	UNITA DRUM RIGENERATO for MINOLTA C250i BK
F012MC250iD_CMY	UNITA DRUM RIGENERATO for MINOLTA C250i CMY
F012MC258D	UNITA DRUM RIGENERATO for MINOLTA C258
F012R1015D	UNITA DRUM RIGENERATO for RICOH 1015 BK
F012R1022D	UNITA DRUM RIGENERATO for RICOH 1022 BK
F012R3003D_CMY	UNITA DRUM RIGENERATO for RICOH MPC3003 CMY
F012R3004D_CMY	UNITA DRUM RIGENERATO for RICOH MPC3004 CMY
F012R3600D_BCMY	UNITA DRUM RIGENERATO for RICOH 3600 BK
F012R4520D_BCMY	UNITA DRUM RIGENERATO for RICOH 4520 BK
F012R471044D_B	UNITA DRUM RIGENERATO for RICOH MC2000 BK
F012R471053D_B	UNITA DRUM RIGENERATO for RICOH MPC3003 BK
F012R471055D_B	UNITA DRUM RIGENERATO for RICOH MPC3004 BK
F012R6546D_B	UNITA DRUM RIGENERATO for RICOH MPC2003 BK
F012R7564D_B	UNITA DRUM RIGENERATO for RICOH MPC2004 BK
F012RC2503D_BCMY	UNITA DRUM RIGENERATO for RICOH MPC2003 BCMY
F012RC3503D_BCMY	UNITA DRUM RIGENERATO for RICOH MPC3003 BCMY
F012RI2205D_BCMY	UNITA DRUM RIGENERATO for RICOH IMC2000 BK
F012RI2554D_BCMY	UNITA DRUM RIGENERATO for RICOH MP 2554
F012RIC3000D_BCMY	UNITA DRUM RIGENERATO for RICOH IM C3000
F012RISP6430D_	UNITA DRUM RIGENERATO for RICOH SP6430 BK
F012RITYPE1515D	UNITA DRUM RIGENERATO for RICOH 1515 BK
F012RMP4000D	UNITA DRUM RIGENERATO for RICOH MP4000 BK
F012RSP400D_BCMY	UNITA DRUM RIGENERATO for RICOH SP 400 DN BK
F012SH3050D_GRAY	UNITA DRUM RIGENERATO for SHARP MX3050 GRAY
F012X2020D_BCMY	UNITA DRUM RIGENERATO for XEROX SC2020 BCMY
F012X4250D	UNITA DRUM RIGENERATO for XEROX 4250 BK
F012X471010D_B	UNITA DRUM RIGENERATO for XEROX ColorJ75 BK
F012X471037D_B	UNITA DRUM RIGENERATO for XEROX C7020 BK
F012X471038D_B	UNITA DRUM RIGENERATO for XEROX C7000DN BK
F012X471047D_B	UNITA DRUM RIGENERATO for XEROX C8000 BK

F012X471082D_B	UNITA DRUM RIGENERATO for XEROX C8130 BK
F012X7949ND_B	UNITA DRUM RIGENERATO for XEROX 7835 BK
F012XCJ75D_CMY	UNITA DRUM RIGENERATO for XEROX C J75 CMY